

PLEASE PAY SPECIAL ATTENTION DURING LOADING / UNLOADING

Roof has to be completely open before loading / unloading.

- Otherwise, the crossbar will be damaged by the grapple of the excavator and the wagon can't be closed correctly.



- Personnel must be very careful that the grapple of the excavator does not hit the walls of the wagon. Impacts cause permanent damage to the wagon!

